 
 


Heavy Duty Synchro Knee-Tilt

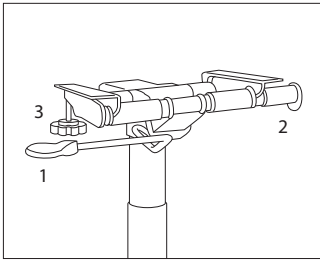

 
1. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
2. **Tilt Lock Lever** secures seat into starting position or allows seat to free float. To release, pull lever outward.
3. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.

Knee-Tilt

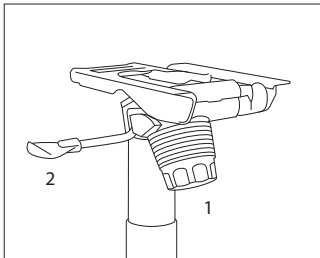


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height/Tilt Lock Lever** raises or lowers seat to desired height and locks seat into starting position in one convenient mechanism. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position. To lock chair-tilt into starting position, push lever inward. To release tilt lock mechanism and free-float, simply pull lever outward.

Multi-Lever

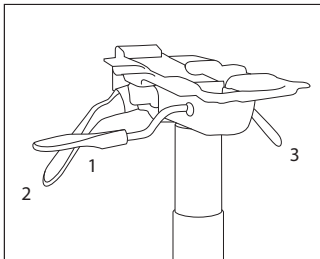


1. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
2. **Seat Angle with Infinite Lock Lever** allows for precise positioning of seat angle. Simply lift upward on lever until desired seat angle is reached. While the lever is in its uppermost position, adjustments can be freely made and then locked into place by pushing downward.
3. **Back Angle with Infinite Lock Lever** provides precise, independent back angle control. To adjust, lift upward on lever until desired back angle is achieved. To freely make adjustments without holding onto the lever, move lever into uppermost position, then, when a comfortable back angle is reached, push downward on lever to lock into place.

 Swivel

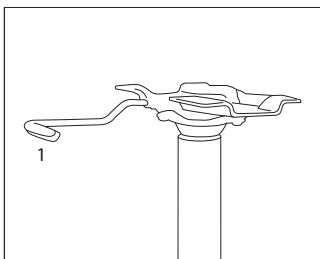


1. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.

 Swivel-Tilt

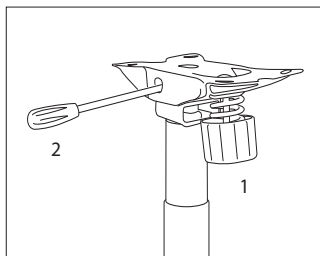


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.

 Swivel-Tilt with Tilt-Lock

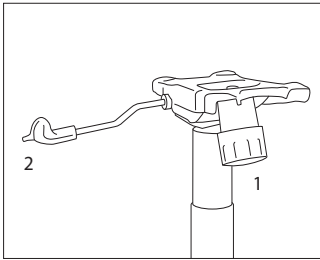


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height/Tilt Lock Lever** raises or lowers seat to desired height and locks seat into starting position in one convenient mechanism. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position. To lock chair-tilt into starting position, push lever inward. To release tilt lock mechanism and free-float, simply pull lever outward.

 Swivel-Tilt with Tilt-Lock and Seat Slider

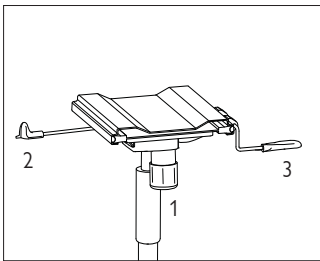


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height/Tilt Lock Lever** raises or lowers seat to desired height and locks seat into starting position in one convenient mechanism. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position. To lock chair-tilt into starting position, push lever inward. To release tilt lock mechanism and free-float, simply pull lever outward.
3. **Seat Slider** provides 2½" front and back horizontal seat depth adjustment. To adjust, lift lever up from the seated position and move seat to desired location. Release lever to lock into place.

 Synchro Knee-Tilt

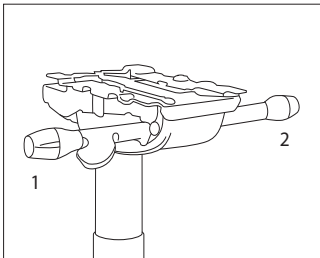


1. **Seat Height/Tension Control** easily raises or lowers seat to desired height and allows for more precise spring tension adjustment. To raise, simply lift weight off seat and pull upward on handle until seat reaches a comfortable height. To lower, lift upward on handle while seated and release to lock seat into desired position. To adjust tension for a firmer or softer tilting motion, turn knob counterclockwise to increase tension, clockwise to decrease tension.
2. **Multi-Position Tilt Lock Lever** secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.

 Synchro Knee-Tilt with Seat Slider

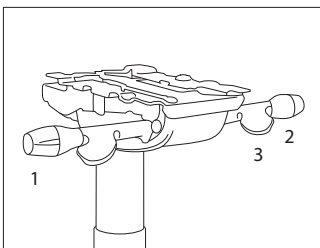


1. **Seat Height/Tension Control** easily raises or lowers seat to desired height and allows for more precise spring tension adjustment. To raise, simply lift weight off seat and pull upward on handle until seat reaches a comfortable height. To lower, lift upward on handle while seated and release to lock seat into desired position. To adjust tension for a firmer or softer tilting motion, turn knob counterclockwise to increase tension, clockwise to decrease tension.
2. **Multi-Position Tilt Lock Lever** secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.
3. **Seat Slider** provides 2½" front and back horizontal seat depth adjustment. To adjust, lift lever up from the seated position and move seat to desired location. Release lever to lock into place.

 Synchro-Tilt

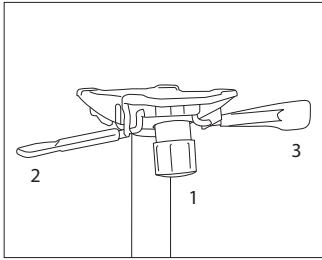


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
3. **Multi-Position Tilt Lock Lever** secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.

 Synchro-Tilt with Seat Slider

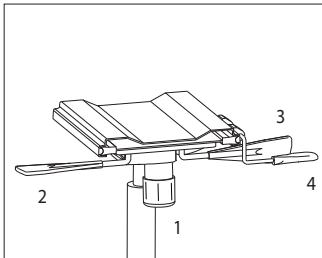


1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
3. **Multi-Position Tilt Lock Lever** secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.
4. **Seat Slider** provides 2½" front and back horizontal seat depth adjustment. To adjust, lift lever up from the seated position and move seat to desired location. Release lever to lock into place.

 Task Intensive

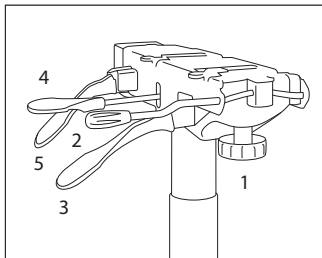

1. **Tension Control Knob** allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
2. **Front Tilt Stop Lever** allows additional forward tilt for optimum task performance. To operate, first release Tilt Lock with Infinite Lock, then tilt seat backward slightly and push lever downward and back. To return chair to upright position, tilt seat back once again and pull lever forward and up to its original position.
3. **Tilt Lock with Infinite Lock Lever** secures seat into any tilt position or allows seat to free float. To lock into a particular position, tilt seat to desired angle and press down on lever. To release, simply lift lever up.
4. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
5. **Back Angle with Infinite Lock Lever** provides precise, independent back angle control. To adjust, lift up on lever until desired back angle is reached. To freely make adjustments without touching lever, move lever into highest position, adjust back angle, then push lever downward to lock into place.

 Weight-Activated

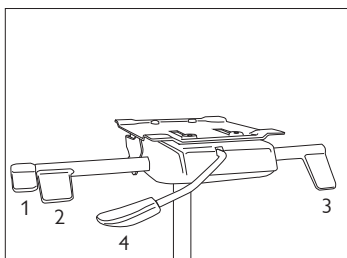

1. **Tension Lever** allows for greater spring tension control for a firmer or softer tilting motion. Push downward to increase tension, pull forward and up to decrease tension.
2. **Seat Height Adjustment** easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
3. **Multi-Position Tilt Lock Lever** secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.
4. **Optional Seat Slider** provides 2½" front and back horizontal seat depth adjustment. To adjust, lift lever up from the seated position and move seat to desired location. Release lever to lock into place.