



Multi-Lever Task Control

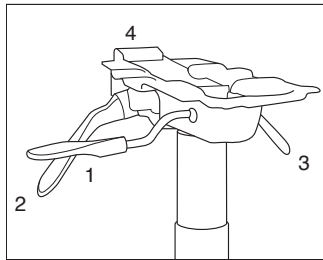

1. Seat Height
2. Seat Angle w/Infinite Lock
3. Back Angle w/Infinite Lock
4. Back Height Adjustment

- Seat Height adjustment easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
- Seat Angle w/Infinite Lock lever allows for precise positioning of seat angle. Simply lift upward on lever until desired seat angle is reached. While the lever is in its uppermost position, adjustments can be freely made and then locked into place by pushing downward.
- Back Angle w/Infinite Lock lever provides precise, independent back angle control. To adjust, lift upward on lever until desired back angle is achieved. To freely make adjustments without holding onto the lever, move lever into uppermost position, then, when a comfortable back angle is reached, push downward on lever to lock into place.
- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.


Task Intensive Management Control

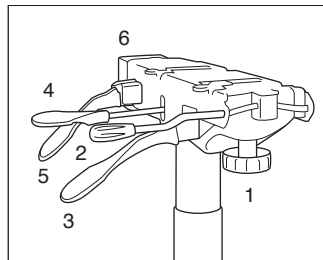

1. Tension Control Knob
2. Front Tilt Stop Lever
3. Tilt Lock w/Infinite Lock
4. Seat Height
5. Back Angle w/Infinite Lock
6. Back Height Adjustment

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Front Tilt Stop Lever allows additional forward tilt for optimum task performance. To operate, first release Tilt Lock w/Infinite Lock, then tilt seat backward slightly and push lever downward and back. To return chair to upright position, tilt seat back once again and pull lever forward and up to its original position.
- Tilt Lock w/Infinite Lock lever secures seat into any tilt position or allows seat to free float. To lock into a particular position, tilt seat to desired angle and press down on lever. To release, simply lift lever up.
- Seat Height adjustment easily raises or lowers seat to desired height. To raise, lift weight off seat and pull up on lever until seat reaches a comfortable height. To lower, lift up on lever while seated and release to lock seat into desired position.
- Back Angle w/Infinite Lock lever provides precise, independent back angle control. To adjust, lift up on lever until desired back angle is reached. To freely make adjustments without touching lever, move lever into highest position, adjust back angle, then push lever downward to lock into place.
- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.

Executive Management Swivel Tilt Control

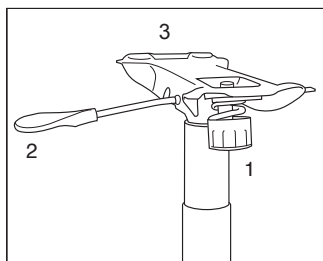


1. Tension Control Knob
2. Seat Height/Tilt Lock
3. Back Height Adjustment

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Seat Height adjustment easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.

Chair Controls

Conference/Executive Swivel Tilt Control with Tilt Lock

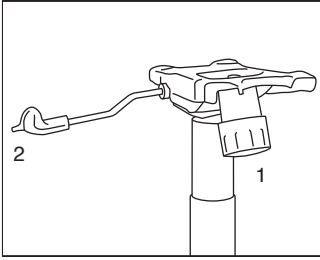


1. Tension Control Knob
2. Seat Height/Tilt Lock

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Seat Height/Tilt Lock lever raises or lowers seat to desired height and locks seat into starting position in one convenient mechanism. To raise, simply lift

weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position. To lock chair-tilt into starting position, push lever inward. To release tilt lock mechanism and free-float, simply pull lever outward.

Conference/Executive & Executive Management Knee-Tilt Control

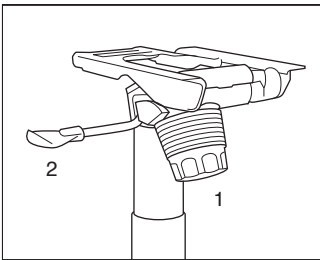


1. Tension Control Knob
2. Seat Height/Tilt Lock

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Seat Height/Tilt Lock lever raises or lowers seat to desired height and locks seat into starting position in one convenient mechanism. To raise, simply lift

weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position. To lock chair-tilt into starting position, push lever inward. To release tilt lock mechanism and free-float, simply pull lever outward.

Executive Management Synchro Knee-Tilt Control

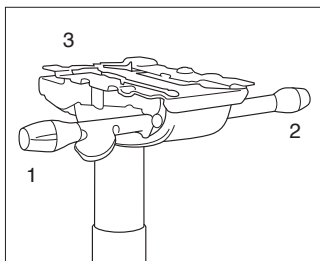

1. Seat Height/Tension Control
2. Multi-Position Tilt Lock
3. Back Height Adjustment*


- Seat Height/Tension Control easily raises or lowers seat to desired height and allows for more precise spring tension adjustment. To raise, simply lift weight off seat and pull upward on handle until seat reaches a comfortable height. To lower, lift upward on handle while seated and release to lock seat into desired position. To adjust tension for a firmer or softer tilting motion, turn knob counterclockwise to increase tension, clockwise to decrease tension.
- Multi-Position Tilt Lock lever secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular

tilting angle, adjust chair to desired position, then turn lever clockwise to lock into place. To release, turn lever counterclockwise, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.

- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.

*If Applicable

**Executive Management
Synchro-Tilt Control**

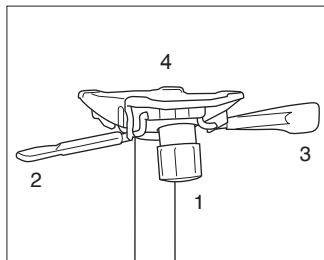


1. Tension Control Knob
2. Seat Height
3. Multi-Position Tilt Lock
4. Back Height Adjustment*

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Seat Height adjustment easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
- Multi-Position Tilt Lock lever secures seat into multiple tilt positions or allows seat to free-float. To secure chair at a particular

- tilting angle, adjust chair to desired position, then push lever backward to lock into place. To release, pull lever forward, then lean into chair back. This mechanism also includes an anti-kick feature that prevents chair back from jolting forward when Tilt Lock is released.
- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.

**Cerra XT
Synchro Knee-Tilt Control**

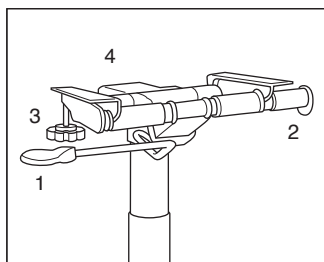


1. Seat Height
2. Tilt Lock
3. Tension Control Knob
4. Back Height Adjustment

- Seat Height adjustment easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.
- Tilt Lock lever secures seat into starting position or allows seat to free float. To release, pull lever outward.

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Back Height adjustment repositions back in multiple increments. To raise back height, simply lift upward on back until desired height is reached. To return to lowest position, raise chair-back to highest level and release to lowest position.

Nexxt Basic Task Control

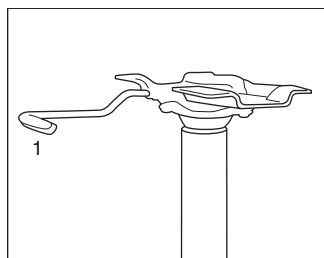


1. Seat Height

- Seat Height adjustment easily raises or lowers seat to desired height. To raise, simply lift weight off seat and pull upward on lever until seat reaches a comfortable height. To lower, lift upward on lever while seated and release to lock seat into desired position.

*If Applicable


Chair Controls

Nexxt Swivel Tilt Control

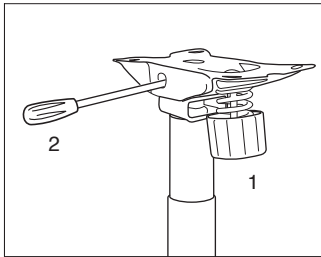

1. Tension Control Knob
2. Seat Height

- Tension Control Knob allows for greater spring tension control for a firmer or softer tilting motion. Turn counterclockwise to increase tension, clockwise to decrease tension.
- Seat Height adjustment easily raises or lowers seat to desired height. To raise, lift weight off seat and pull up on lever until seat reaches a comfortable height. To lower, lift up on lever while seated and release to lock seat into desired position.

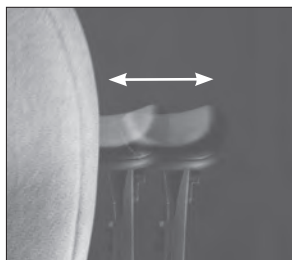

Width Adjustable Arms

1¾" horizontal adjustment per arm.



Pivot Arms

15-degree horizontal swivel arm pad adjustment inward or outward.



Seat Slider

2½" front and back horizontal seat depth adjustment.



Stool Option

Extended 10" lift.



Standard Base

Polished Aluminum or Brushed Aluminum finish (select models only).



High Profile Base

Polished Aluminum finish (select models only).



Jury Base

Satin Black finish



Soft Tread Casters

55mm diameter soft rubber wheel for hard surface floors.